


Instructions - System solution
 MIWO/PIR - Type B
 Insulating panel type FV/M

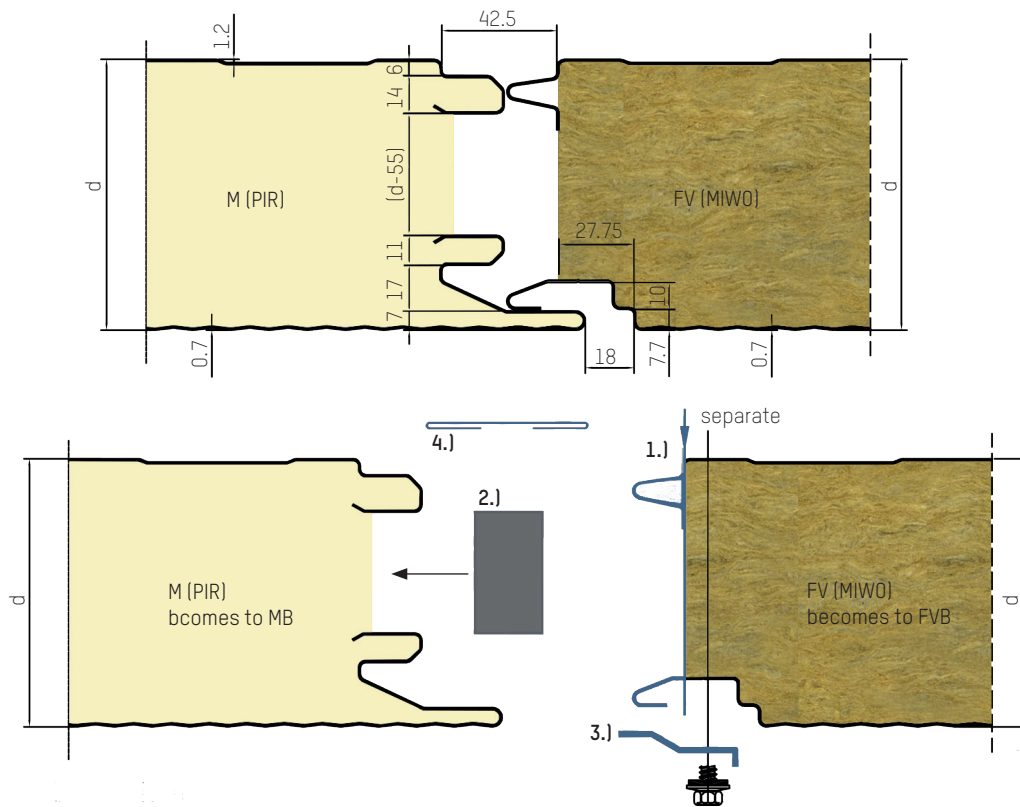

Work steps:

1.) Cut off the metal nibs on the MIWO panel


2.) Insert seal tape (5 x 20mm) item no. 1008429 for M 60
 Insert seal tape (25 x 25mm) item no. 1008428 for M 80, from M 100 insert PIR insulating strips,
 Insulating strips 25 x (d-55) - 2000mm long
 100mm - item no. 1005819 140mm - item no. 1008407
 120mm - item no. 1005178 170mm - item no. 1008408



3.) Fasten the MIWO panel with mounting strap "B" item no. 1003885 to the base construction and slide the PIR panel in



4.) Close the inner surface with a flat section item no. 1000979

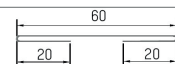

Example: FVB100/MB100, PIR/MIWO

