


## Instructions - System solution

### PIR/MIWO - Type C

#### Insulating panel type P/FP

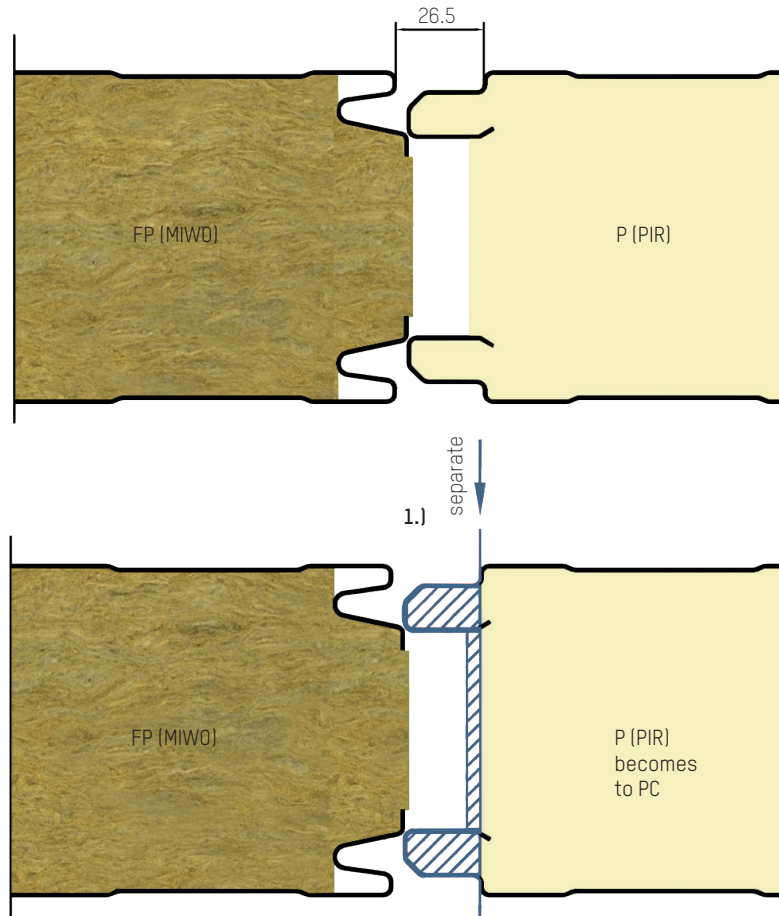

#### Work steps:

- 1.) Cut off the PIR panel
- 2.) Slide the panels together
- 3.) Fasten the panels

Example: PC100/FP100, PIR/MIWO

